



---

# FAIRY FLOSS MACHINE INSTRUCTIONS

- Your floss machine comes transported with a motor locking mechanism. This is either a large handle over the top of the machine or two black switches on the side of the machine. Pull the handle all the way down to unlock the motor or switch the small black tabs on the side of the machine to the “unlock” position
- Add fairy floss sugar to the centre element using the scoop (supplied). Our premium machines allow up to 400 grams of sugar at one time however we recommend only using what is required (2-3 scoops will produce approximately 2 average sized floss cones)
- Turn centre element on by using power switch labelled MOTOR on front of machine
- Turn heating element on by using heat switch labelled HEAT on front of machine
- For comfortable floss making speed, turn the dial  $\frac{1}{3}$  of the way up clockwise (between low and the middle of the dial)
- The centre element (where you poured the sugar) will take approx. 30 - 60 seconds to heat up (be sure to have turned up the dial) before floss starts to disperse
- Fairy floss will now start to appear so have your floss cone ready!
- Grip the cone at the bottom and break into the web of floss inside the bowl

- Wind the sugar onto the cone and when you have enough volume, lift your cone upwards and continue to wind more sugar onto the cone
- If you do not require any more floss cones, turn off the machine by winding down the dial to LOW, switching off the heat by using the heat switch labelled HEAT on front of machine and turning off the centre element by using the power switch labelled MOTOR on front of machine
- Otherwise, repeat the process above

**! ! DO NOT INSERT LEAVE UNATTENDED // TURN OFF MACHINE WHEN NOT MAKING FAIRY FLOSS // DO NOT ALLOW CHILDREN TO OPERATE / ! !**

